

Channel ID	Item Type	Label	Description	Findings	WHR930 Basic
<b>Binding Control</b>					
bindingControl/activate	Switch	Activate Binding Control	Activate (control through openIAB) or deactivate (return control to CCEase) binding control	Readable	
<b>Ventilation Values</b>					
ventilation/fanLevel	Number	Fan Level	Fan level	Readable	Away, Level 1, Level 2
ventilation/fanOut0	Number	Fan Out Level 0 (away)	Fan level 0 performance (%) of outgoing fan	Readable	At normal operation the ventilation state is balanced meaning When changing the fanspeed the WHR930 goes to another ventilator state only take air out of the building
ventilation/fanOut1	Number	Fan Out Level 1	Fan level 1 performance (%) of outgoing fan	Readable	This is incorrect!
ventilation/fanOut2	Number	Fan Out Level 2	Fan level 2 performance (%) of outgoing fan	Readable	same problem as with ventilation/fanOut0
ventilation/fanOut3	Number	Fan Out Level 3	Fan level 3 performance (%) of outgoing fan	Readable	same problem as with ventilation/fanOut0
ventilation/fanIn0	Number	Fan In Level 0 (away)	Fan level 0 performance (%) of incoming fan	Readable	not available
ventilation/fanIn1	Number	Fan In Level 1	Fan level 1 performance (%) of incoming fan	Readable	same problem as with ventilation/fanOut0
ventilation/fanIn2	Number	Fan In Level 2	Fan level 2 performance (%) of incoming fan	Readable	same problem as with ventilation/fanOut0
ventilation/fanIn3	Number	Fan In Level 3	Fan level 3 performance (%) of incoming fan	Readable	same problem as with ventilation/fanOut0
ventilation/fanInPercent	Number	Fan In (%)	Current relative speed (%) of incoming fan	Readable	not available
ventilation/fanOutPercent	Number	Fan Out (%)	Current relative speed (%) of outgoing fan	Readable	
ventilation/fanInRPM	Number	Fan In (rpm)	Current absolute speed (rpm) of incoming fan	Readable	
ventilation/fanOutRPM	Number	Fan Out (rpm)	Current absolute speed (rpm) of outgoing fan	Readable	
<b>Temperature Values</b>					
temperatures/targetTemperature	Number:Temperature	Target Temperature	Target (comfort) temperature	Readable	
temperatures/outdoorTemperatureIn	Number:Temperature	Outdoor Temperature Incoming	Intake air temperature (outside)	Readable	
temperatures/outdoorTemperatureOut	Number:Temperature	Outdoor Temperature Outgoing	Outlet air temperature (outside)	Readable	
temperatures/indoorTemperatureIn	Number:Temperature	Indoor Temperature Incoming	Inlet air temperature (inside)	Readable	
temperatures/indoorTemperatureOut	Number:Temperature	Indoor Temperature Outgoing	Uptake air temperature (inside)	Readable	
temperatures/s1T1Sensor	Switch	Sensor T1 Available	Availability of temperature sensor T1 (outdoor in)	Readable	
temperatures/s1T2Sensor	Switch	Sensor T2 Available	Availability of temperature sensor T2 (outdoor in)	Readable	
temperatures/s1T3Sensor	Switch	Sensor T3 Available	Availability of temperature sensor T3 (indoor out)	Readable	
temperatures/s1T4Sensor	Switch	Sensor T4 Available	Availability of temperature sensor T4 (outdoor out)	Readable	
temperatures/s1WTSensor	Switch	GHX Sensor Available	Availability of geothermal heat exchanger temperature sensor	Readable	not available on WHR930 Basic
temperatures/s1HeaterSensor	Switch	Heater Sensor Available	Availability of heater temperature sensor	Readable	not available on WHR930 Basic
temperatures/s1CookerhoodSensor	Switch	Cookerhood Sensor Available	Availability of cookerhood temperature sensor	Readable	not available on WHR930 Basic
temperatures/ew1Temperature	Number:Temperature	GHX Temperature	Temperature of geothermal heat exchanger sensor	Not Readable (Nul)	not available on WHR930 Basic
temperatures/heaterTemperature	Number:Temperature	Heater Temperature	Temperature of heater sensor	Not Readable (Nul)	not available on WHR930 Basic
temperatures/cookerhoodTemperature	Number:Temperature	Cookerhood Temperature	Temperature of cookerhood sensor	Not Readable (Nul)	not available on WHR930 Basic
<b>Uptimes</b>					
times/level0Time	Number:Time	Level 0 duration	Uptime at level 0 (away)	Readable	
times/level1Time	Number:Time	Level 1 duration	Uptime at level 1	Readable	
times/level2Time	Number:Time	Level 2 duration	Uptime at level 2	Readable	
times/level3Time	Number:Time	Level 3 duration	Uptime at level 3	Not Readable (Nul)	not available
times/freezeTime	Number:Time	Antifrost Duration	Uptime of antifrost	Readable	Readable but stays on 0h all the time
times/preheaterTime	Number:Time	Preheater Duration	Uptime of preheater	Readable	
times/bypassTime	Number:Time	Bypass Duration	Hours of bypass open	Readable	Readable stays on 0h all the time see also bypass/BypassSummer
times/filterHours	Number:Time	Filter Duration	Uptime of the filter	Readable	
<b>Menu P1: Control States</b>					
menuP1/menu20Mode	Switch	Menu 20 Mode (P10)	State of menu 20 mode (P10)	Not Readable (Nul)	menu P1 not existing on this WHR930 Basic (stork air). Downloaded a document from zehnder and there is a menu P1 on the WHR930 Basic. Don't know when this is changed!
menuP1/menu21Mode	Switch	Menu 21 Mode (P11)	State of menu 21 mode (P11)	Not Readable (Nul)	menu P1 not existing on this WHR930 Basic (stork air). Downloaded a document from zehnder and there is a menu P1 on the WHR930 Basic. Don't know when this is changed!
menuP1/menu22Mode	Switch	Menu 22 Mode (P12)	State of menu 22 mode (P12)	Not Readable (Nul)	menu P1 not existing on this WHR930 Basic (stork air). Downloaded a document from zehnder and there is a menu P1 on the WHR930 Basic. Don't know when this is changed!
menuP1/menu23Mode	Switch	Menu 23 Mode (P13)	State of menu 23 mode (P13)	Not Readable (Nul)	menu P1 not existing on this WHR930 Basic (stork air). Downloaded a document from zehnder and there is a menu P1 on the WHR930 Basic. Don't know when this is changed!
menuP1/menu24Mode	Switch	Menu 24 Mode (P14)	State of menu 24 mode (P14)	Not Readable (Nul)	menu P1 not existing on this WHR930 Basic (stork air). Downloaded a document from zehnder and there is a menu P1 on the WHR930 Basic. Don't know when this is changed!
menuP1/menu25Mode	Switch	Menu 25 Mode (P15)	State of menu 25 mode (P15)	Not Readable (Nul)	menu P1 not existing on this WHR930 Basic (stork air). Downloaded a document from zehnder and there is a menu P1 on the WHR930 Basic. Don't know when this is changed!
menuP1/menu26Mode	Switch	Menu 26 Mode (P16)	State of menu 26 mode (P16)	Not Readable (Nul)	menu P1 not existing on this WHR930 Basic (stork air). Downloaded a document from zehnder and there is a menu P1 on the WHR930 Basic. Don't know when this is changed!
menuP1/menu27Mode	Switch	Menu 27 Mode (P17)	State of menu 27 mode (P17)	Not Readable (Nul)	menu P1 not existing on this WHR930 Basic (stork air). Downloaded a document from zehnder and there is a menu P1 on the WHR930 Basic. Don't know when this is changed!
menuP1/menu28Mode	Switch	Menu 28 Mode (P18)	State of menu 28 mode (P18)	Not Readable (Nul)	menu P1 not existing on this WHR930 Basic (stork air). Downloaded a document from zehnder and there is a menu P1 on the WHR930 Basic. Don't know when this is changed!
menuP1/menu29Mode	Switch	Menu 29 Mode (P19)	State of menu 29 mode (P19)	Not Readable (Nul)	menu P1 not existing on this WHR930 Basic (stork air). Downloaded a document from zehnder and there is a menu P1 on the WHR930 Basic. Don't know when this is changed!
<b>Menu P2: Delay Settings</b>					
menuP2/bathroomStartDelay	Number	Menu P21	Start delay for bathroom switch (min)	Readable	
menuP2/bathroomEndDelay	Number	Menu P22	End delay for bathroom switch (min)	Readable	
menuP2/1_EndDelay	Number	Menu P23	End delay for 1 switch (min)	Readable	
menuP2/pulseVentilation	Number	Menu P27	Period for pulse ventilation (min)	Readable	not available on WHR930 Basic
menuP2/filterWeeks	Number	Menu P24	Usage period until filter pollution message (weeks)	Readable	
menuP2/RFShortDelay	Number	Menu P25	End delay (RF short actuation) for ventilation level 3 (min)	Readable	
menuP2/RF1LongDelay	Number	Menu P26	End delay (RF long actuation) for ventilation level 3 (min)	Readable	
menuP2/cookerhoodDelay	Number	Menu P20	End delay for cooker hood control (min)	Not Readable (Nul)	not available on WHR930 Basic
<b>Menu P9: Option States</b>					
menuP9/chimneyState	Switch	Chimney Control State	State of the chimney control	Not Readable (Nul)	menu P9 not existing on this WHR930 Basic (stork air). Downloaded a document from zehnder and there is a menu P9 on the WHR930 Basic. Don't know when this is changed!
menuP9/bypassState	Switch	Bypass State	State of the bypass (ON = open / OFF = closed)	Not Readable (Nul)	menu P9 not existing on this WHR930 Basic (stork air). Downloaded a document from zehnder and there is a menu P9 on the WHR930 Basic. Don't know when this is changed!
menuP9/ewState	Switch	GHX State	State of the geothermal heat exchanger valve (ON = open / OFF = closed)	Not Readable (Nul)	menu P9 not existing on this WHR930 Basic (stork air). Downloaded a document from zehnder and there is a menu P9 on the WHR930 Basic. Don't know when this is changed!
menuP9/heaterState	Switch	Heater State	State of the heater	Not Readable (Nul)	menu P9 not existing on this WHR930 Basic (stork air). Downloaded a document from zehnder and there is a menu P9 on the WHR930 Basic. Don't know when this is changed!
menuP9/controlState	Switch	0-10V Control State	State of the 0-10V control	Not Readable (Nul)	menu P9 not existing on this WHR930 Basic (stork air). Downloaded a document from zehnder and there is a menu P9 on the WHR930 Basic. Don't know when this is changed!
menuP9/frostState	Switch	Antifrost State	State of the antifrost control	Not Readable (Nul)	menu P9 not existing on this WHR930 Basic (stork air). Downloaded a document from zehnder and there is a menu P9 on the WHR930 Basic. Don't know when this is changed!
menuP9/cookerhoodState	Switch	Cookerhood State	State of the cookerhood control	Not Readable (Nul)	menu P9 not existing on this WHR930 Basic (stork air). Downloaded a document from zehnder and there is a menu P9 on the WHR930 Basic. Don't know when this is changed!